

CODE SETTING INSTRUCTIONS

How to open:

1. Remove the waterproof rubber cover to reveal the push buttons.
2. Enter your code by pushing 1 button at a time and then pull the opening lever down to open. Factory Default: Your key safe is not set with a combination from the factory. Push the clear button and pull down on the opening lever.
3. You can clear any incorrect code entered by pushing the clear button.
4. The code can be entered in any order (i.e. 1-2-3 or 3-2-1)

Setting new combination:

1. Open the door by using the method above to reveal the setting dials on the back of the door (fig.1).
2. Remove the setting key from the inside of the storage box (fig.2).
3. Choose a combination between 1 & 9 numbers long and write it down prior to re-setting the lock.
4. Each button has an 'On' and 'Off' setting using a dial that can be rotated 180 degrees by using the setting key.
5. The dial has an arrow:
 - a) When the arrow is pointing away from you the number is set and part of the combination (fig.3a).
 - b) When the arrow is pointing towards you the number is unset and not part of the combination (fig.3b).
6. By using the setting key rotate the dials in the correct position to match your chosen combination.
7. Important: You **MUST** check your combination works before closing. With the door **OPEN** press the clear button and enter your combination as detailed above and pull opening lever to ensure correct operation.
8. Replace the setting key back for use at a later date.

